

CHANGE THE STANDARD MELODIES

DESCRIPTION

- 16 pre-recorded melodies are stored by default in the internal memory of the sounder.
- Other melodies can be played from a SD card or transferred in the internal memory of the sounder.

PLAY FROM A SD CARD

- An optional SD card is available to record and play other melodies (MP3 format). The melodies of this SD card are played instead of the standard melodies. They can be recorded by the user from a computer.



TRANSFER NEW MELODIES IN THE INTERNAL MEMORY

Except melody n°16, the melodies saved in the internal memory of the Melodys can be replaced.

The new melodies must be saved on the SD card as MP3 Files and named as follows:

- Melody n°1 = «a.mp3»
- Melody n°2 = «b.mp3»
- ...
- Melody n°15 = «o.mp3».

Caution: the size of the internal memory is limited to 4 Mo.

The Melodys must be switched on and the SD card inserted in the slot.

Press briefly on the “Mel” key, then press again and hold down for more than 10 seconds until the transfer starts

The standard melodies n°1 to 15 are erased and replaced by the melodies of the SD card. Remark: the standard melodies can be downloaded from Bodet website.

The melodies recorded on the memory card have to respect copyrights. Please refer to the current laws in your country.


Remark: SDHC cards are not compatible.

- **SD CARD*** SD or SDHC, 32 GB maximum.

**For the Lockdown procedure messages we recommend the use of a BODET SD card. By using a card different from the one proposed by Bodet you become sole responsible for the proper operation of the Lockdown procedure.*

REFERENCE

- 508 474..... SD card with pre-recorded melodies

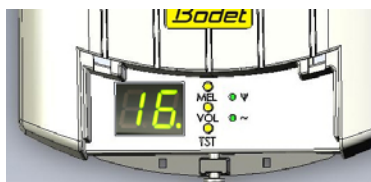

Indoor sounder keyboard



Outdoor sounder keyboard